

OWNERS MANUAL

AS-40D COMPACT DMX DIMMER

Version 2.0 02/13/2005

Page 1 of 5

IMPORTANT

Please take a moment to read this manual before you operate the AS - 40D dimmer.



DESCRIPTION

The AS-40D is a compact 4 channel light dimmer. It has a maximum capacity of 600 Watts per channel and a maximum TOTAL load capacity of 2400 Watts. It is supplied with an input power cord which may be connected to a 120 VAC, 20 Amp power circuit. The AS-40D is intended for INDOOR USE ONLY. The unit operates using the USITT DMX-512 protocol. The AS-40D may be operated in a relay (non-dim) mode. The unit will also function as a stand alone chaser and has eight primary preset chase patterns which may be used.

INSTALLATION

LOCATION:

Locate the unit in a well ventilated area away from moisture and heat. Two $\frac{1}{2}$ " holes are provided on one end of the dimmer to install a lighting bar pipe clamp and suitable safety cables.

POWER CONNECTIONS:

Extending from the chassis is a 20 amp line cord for connection to a 120 VAC, 20 Amp, grounded service. Total capacity of the AS-40D is 2400 watts.

LOAD CONNECTIONS:

There is one Edison Plug connector provided for each AS-40D output channel. They are located along the left and right edges of the unit. The markings on the cover indicate the channel numbers for each connection. The maximum capacity of each channel is 600 watts.

CONTROL SIGNAL CONNECTIONS:

The male five pin XLR connector on the unit end panel connects to the control console. The female connector is for connection to additional dimmers. The AS-40D dimmer is compatible with the USITT DMX-512 protocol.

Note that the DMX standard does not provide for console power via the dimmer chain. Therefore the DMX console used with AS-40D dimmers must be powered by other means.

Wiring information for the DMX control signal connectors is shown on the unit top cover.


Version 2.0

AS-40D COMPACT DMX DIMMER OWNERS MANUAL

Page 2 of 6

02/13/2005

CHASSIS END VIEW

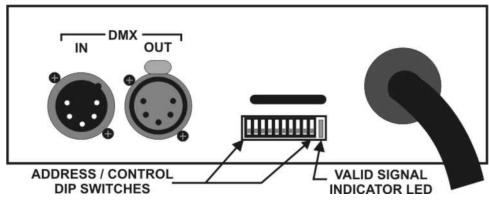


OPERATION

NORMAL MODE (non-chaser)

A green LED in the end panel will indicate that a valid control signal (DMX) is applied to the unit. A DIP switch block on the end panel selects the starting channel number of the dimmer. The 7 right hand switches control this function. For example, if all switch positions are down - the dimmer will respond to console channels 1-4. Moving the switch position on the far right to up will set the dimmer to respond to channels 5-8. A complete table of channel assignments is provided at the end of this manual. You can address up to 512 channels using DMX control.

RELAY MODE: Pairs of channels (1/2 and/or 3/4) may be switched into the relay mode. In this mode the output of these channels will be either off or full on depending on the control console channel setting. The trip point for turn on is aprox. 50%. The 2 left hand switches on the DIP switch block control relay mode channel selection.

NORMAL MODE SWITCH FUNCTIONS

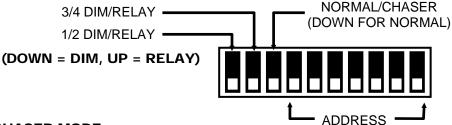

CHASER MODE

When operating in the chaser mode the AS-40D becomes independent of the control console and other dimmers. The green LED indicator is OUT when in the chaser mode. Chaser mode is turned on and off by one of the DIP switches on the end of the unit. A diagram on the unit cover shows the switch settings for controlling chaser operation.

Eight different chaser patterns are available. A "bounce" condition may be imposed on several of the chase patterns by setting one of the DIP switches. The bounce condition causes the chase pattern to run in alternating directions.

The chase step time may be controlled for up to 64 seconds per step. Step fade time is proportional to the step time. If a channel is in the relay mode during chaser operation - it will "snap" on and off (zero fade time). The tables below show the details of chaser settings.


Version 2.0

AS-40D COMPACT DMX DIMMER OWNERS MANUAL

Page 3 of 6

02/13/2005

CHASER MODE SWITCH FUNCTIONS

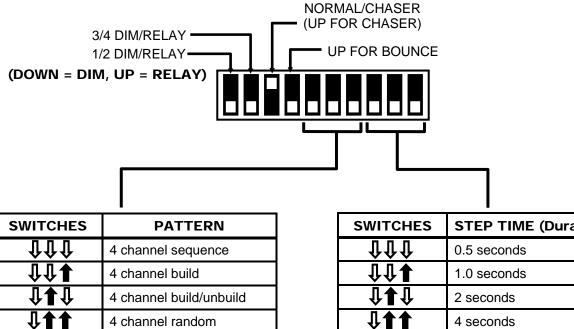

ÛÛÛ	4 channel sequence				
①①▮	4 channel build				
₽₽₽	4 channel build/unbuild				
₽₽₽	4 channel random				
↑ ↓↓	3 channel sequence +				
↑ ↓↑	3 channel build				
11	3 channel build/unbuild				
111	2 channel alternating				

SWITCHES	STEP TIME (Duration)
ÛÛÛ	0.5 seconds
₽₽	1.0 seconds
Û¶Ū	2 seconds
₽ ↑ ↑	4 seconds
₽ ŪŪ	8 seconds
↑ ↓↑	16 seconds
11	32 seconds
111	64 seconds

MAINTENANCE AND REPAIR

TROUBLESHOOTING

- Check that you have power applied to the dimmer.
- Check that all light fixtures are functional.
- · Check the fuses.

- Check the DMX control cable.
- Check the settings of the dimmer DIP switches.
- Check the console setup for correct patching.

REPAIR

The only AS – 40D user serviceable parts are externally accessible fuses. Replace fuses ONLY with 5 Amp, 250VAC, fast blow fuses. Internal service on the unit by other than Lightronics authorized agents will void the warranty. If service is required, contact the dealer from whom you purchased the dimmer, or Lightronics, Service Department, 509 Central Drive, Virginia Beach, VA 23454. Tel: 757 486 3588.

Version 2.0

AS-40D COMPACT DMX DIMMER OWNERS MANUAL

Page 4 of 6

02/13/2005

CHANNEL ASSIGNMENT SETTINGS

The DIP Switch Setting column shows the positions of the DIP switches on the dimmer. The Start Channel column shows the resulting channel assignment for the first channel of the dimmer

All Lightronics products using DIP switches for address assignments conform to this table. Some dimmers cannot be set to all 512 channels and will have fewer switches than are shown in the table. If this is the case then match the right end switches in the table to your dimmer switches. NOTE: Some control consoles can be programmed or "patched" to alter their channel order. You may get unexpected results if you are not aware of the console patch condition when you assign channels at a dimmer.

EXAMPLE: If a dimmer's DIP switches are set to \$\Pi\O\Pi\O\Pi\O\Dim\O\Di

DIP Switch	Start	DIP Switch	Start	DIP Switch	Start	DIP Switch	Start
Setting	Channel	Setting	Channel	Setting	Channel	Setting	Channel
ûûûûûûû	1	0.00000	129	\mathbf{O} $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$	257	00 0 0 0 0 0	385
↑↑↓↓↓ ∪	5	0.00000	133	0 0 0 0 0 0	261	00 0 0 0	389
ប្រាប្បាប្បាប្បាប្បាប្បាក	9	$\hat{\mathbf{U}}\mathbf{U}\hat{\mathbf{U}}\hat{\mathbf{U}}\hat{\mathbf{U}}\hat{\mathbf{U}}\hat{\mathbf{U}}$	137	\mathbf{O} $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$	265	0000000	393
<u> </u>	13	0.00000	141	0 0 0 0 0	269	00 ↑↑↓00	397
ប្ ប ប្បុប្	17	$\hat{\mathbf{U}}$ $\hat{\mathbf{U}}$ $\hat{\mathbf{U}}$ $\hat{\mathbf{U}}$ $\hat{\mathbf{U}}$ $\hat{\mathbf{U}}$	145	\mathbf{O} $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$	273	00 00 00	401
0.0000	21	0.00000	149	\mathbf{O} $\mathbf{\hat{U}}$ $\mathbf{\hat{U}}$ $\mathbf{\hat{U}}$ $\mathbf{\hat{U}}$ $\mathbf{\hat{U}}$ $\mathbf{\hat{U}}$	277	0000000	405
$\Omega\Omega\Omega\Omega\Omega\Omega$	25	0.00000	153	0 0 0 0 0	281	0000000	409
$\Omega\Omega\Omega\Omega\Omega$	29	0000000	157	000000	285	00 0⊕⊕ 000	413
ប្ដាប្ ប ប្ដាប្	33	Ω	161	\mathbf{O} $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$ $\hat{\mathbf{O}}$	289	0000000	417
ψψψψψψ	37	Ω	165	0 0 0 0 0 0	293	0000000	421
Դ ԴԴ Ն ԴԴ ԴԴ	41	0.00000	169	0 0 0 0 0 0	297	0000000	425
↑ ↑ 0 0 0 0	45	000000	173	0 0 0 0 0	301	0000000	429
ûûûûûûû	49	Ω	177	0 0 0 0 0 0	305	00 000000	433
$\Omega \Omega \Omega \Omega \Omega \Omega$	53	Ω	181	0 0 0 0 0	309	0000000	437
ŶŶŶŶŎŎŎ	57	Ω	185	0 0 0 0 0 0	313	00 00000	441
�������	61	0000000	189	000000	317	000000	445
ប្រាប្បាប្រាប្	65	0.000000	193	\mathbf{O} \mathbf{O} \mathbf{O} \mathbf{O} \mathbf{O} \mathbf{O} \mathbf{O} \mathbf{O}	321	000 0 0 0	449
<u> </u>	69	0.000000	197	0 0 0 0 0 0 0	325	0000000	453
<u> </u>	73	000000	201	0 0 0 0 0 0 0	329	0000000	457
↑ ↑ 0 ↑ 0 0	77	000000	205	0000000	333	0000000	461
<u> </u>	81	Ω	209	\mathbf{O} \mathbf{O} \mathbf{O} \mathbf{O} \mathbf{O} \mathbf{O} \mathbf{O}	337	000 ⊕0⊕⊕	465
$\hat{T}\hat{T}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}\hat{U}$	85	Ω	213	0 0 0 0 0 0	341	00000000	469
0.0000	89	000000	217	0 0 0 0 0 0	345	000 0000	473
$^{\uparrow\uparrow}000000$	93	000000	221	O \$O\$OOO	349	0000000	477
<u> </u>	97	000000	225	0000 0 0 0	353	0000 ⊕⊕⊕	481
$^{\hat{1}\hat{1}\hat{1}\hat{1}\hat{1}\hat{1}\hat{1}\hat{1}\hat{1}1$	101	000000	229	0 0 0 0 0 0	357	00000000	485
Դ ՊՍՍԴՈֆ	105	000000	233	0 0 0 0 0 0 0	361	0000û0û	489
0.00000	109	000000	237	0000000	365	0000000	493
ŶŶ000 ���	113	00000	241	0 0 0 0 0 0 0	369	00000⊕₽	497
\$\$000\$ 0	117	000000	245	0000000	373	0000000	501
0.0000	121	00000	249	000000₽	377	000000	505
1000000	125	₽000000	253	000000	381	0000000	509

All Lightronics products are warranted for a period of TWO/FIVE YEARS from the date of purchase against defects in materials and workmanship.

This warranty is subject to the following restrictions and conditions:

- A) If service is required, you may be asked to provide proof of purchase from an authorized Lightronics dealer.
- B) The FIVE YEAR WARRANTY is only valid if the warranty card is returned to Lightronics accompanied with a copy of the original receipt of purchase within 30 DAYS of the purchase date, if not then the TWO YEAR WARRANTY applies. Warranty is valid only for the original purchaser of the unit.
- C) This warranty does not apply to damage resulting from abuse, misuse, accidents, shipping, and repairs or modifications by anyone other than an authorized Lightronics service representative.
- D) This warranty is void if the serial number is removed, altered or defaced.
- E) This warranty does not cover loss or damage, direct or indirect arising from the use or inability to use this product.
- F) Lightronics reserves the right to make any changes, modifications, or updates as deemed appropriate by Lightronics to products returned for service. Such changes may be made without prior notification to the user and without incurring any responsibility or liability for modifications or changes to equipment previously supplied. Lightronics is not responsible for supplying new equipment in accordance with any earlier specifications.
- G) This warranty is the only warranty either expressed, implied, or statutory, upon which the equipment is purchased. No representatives, dealers or any of their agents are authorized to make any warranties, guarantees, or representations other than expressly stated herein.
- H) This warranty does not cover the cost of shipping products to or from Lightronics for service.
- I) Lightronics Inc. reserves the right to make changes as deemed necessary to this warranty without prior notification.